



<How To Download PW392 By Way Of RS232:>

(1. Connect to PC **RS232** port to projector like below picture:

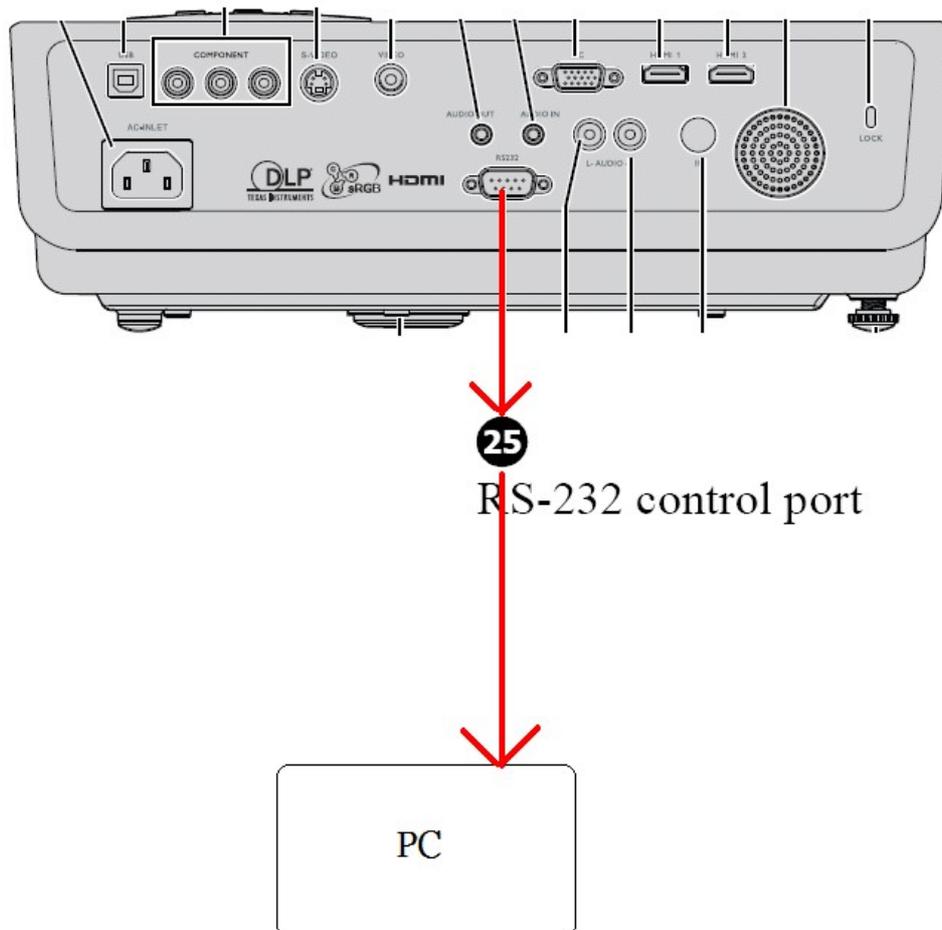


- (2. Run “20090914_PW392 Downloader_V1.5.exe”
and input correct “COM:” port number, e.g.: 1 ~ 5

PS: You don’t need to input the Baud Rate setting, SW will automatically
switch different of baud rate (9600, 19200, 38400, 57600, 115200)
to link with projector

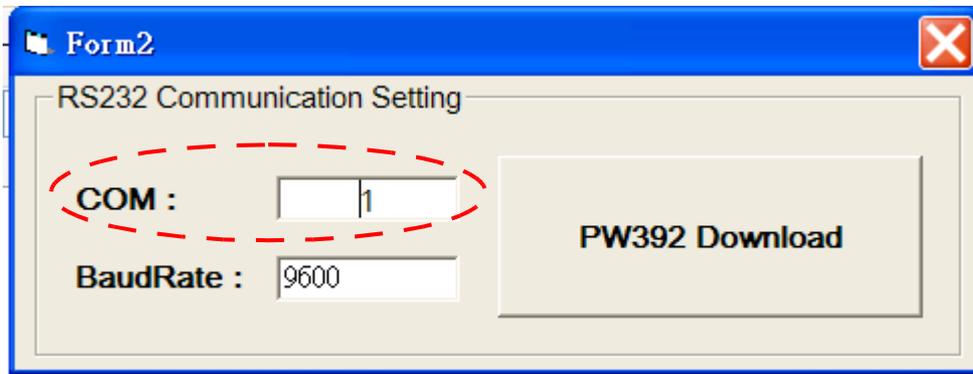


- (3. Select the “PW392 Download” button

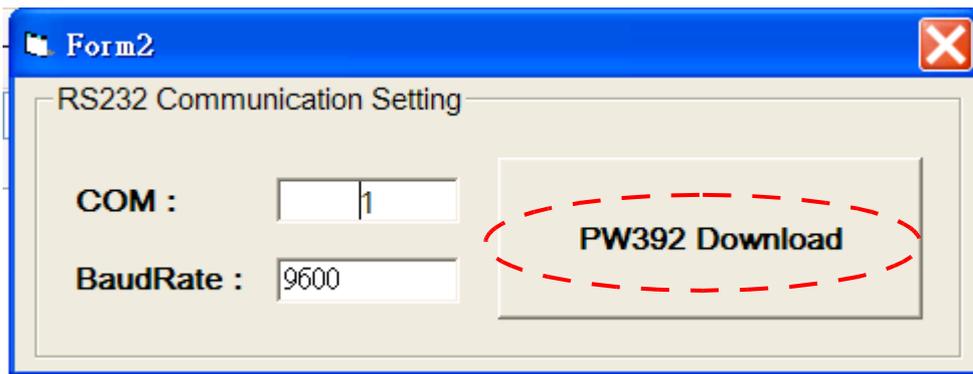

PS: If you see below warning message of “No Action”, it means that
the projector got something wrong or the RS232 cable did not get
well connection



- (4. Then you can see a pop-up Pixelworks FlashUpgrader tool as below:
Please input some of correct info before download then select “Flash”

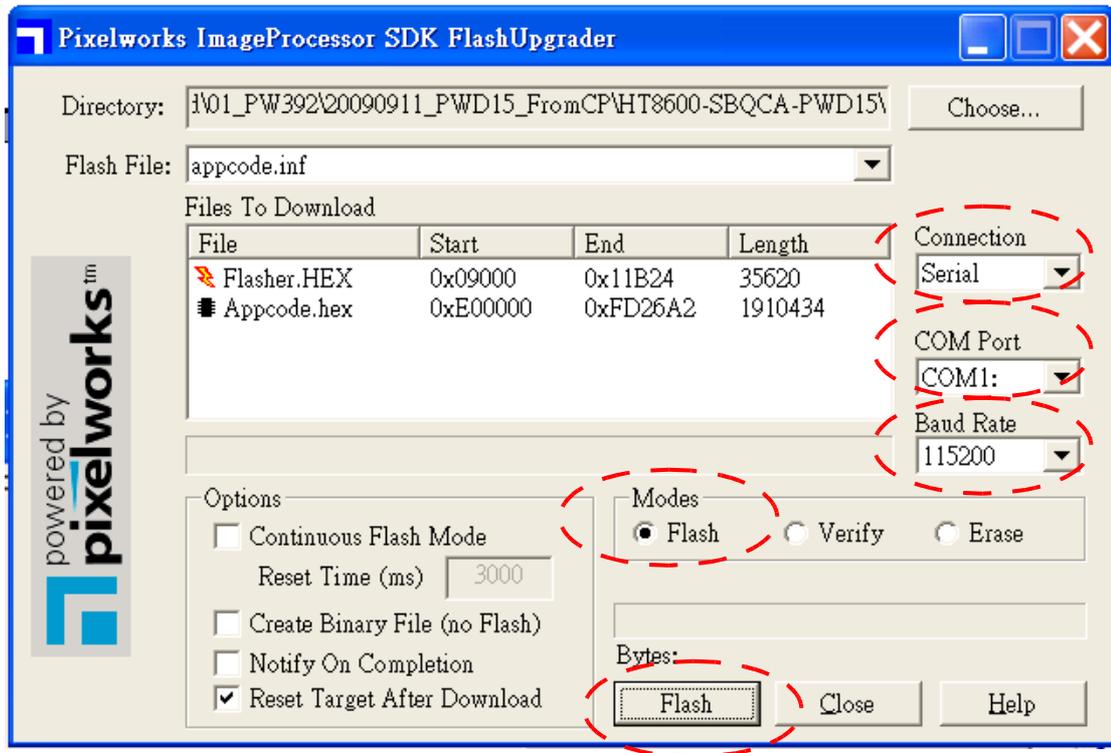

(5. Power on projector then you can see PW392 is downloading as below:

